


JWR Bugeye Electrical Components Index

<u>ITEM</u>	<u>PAGE NUMBER</u>		<u>ITEM</u>	<u>PAGE NUMBER</u>
Alternator	5		Hazard Switch	See Connector E
Brake Light LH Rear	6		Headlights	5
Brake Light RH Rear	6		Heater Blower Motor	2
Brake Switch	4		Heater Switch	2
Charging Warning Lamp	5		High Beam Warning Light	6
Courtesy Lights	4		Horns	6
Courtesy Light Relay	3		Horn Button	2
Courtesy Light Switch	3		Ignition Coil	5
Dip Switch	5		Ignition/Light Switch	1
Distributor	5		License Plate Lamp	6
Driving Lights	4		Panel Lamp Switch	4
Driving Light Relay	4		Radiator Fan	4
Driving Light Switch	4		Radiator Fan Switch	4
Driving Light Warning Lamp	3		Radiator Temp Sensor	4
Flasher Buzzer Alarm	4		Sidelights (Front)	6
Flasher Light LH Front	6		Speedometer	1
Flasher Light RH Front	6		Starter	5
Flasher Light LH Rear	6		Starter Switch	5
Flasher Light RH Rear	6		Tachometer	1
Flasher Warning Lamp	4		Tail Lights	6
Fuel Gauge	1		Turn Indicator Switch	1
Fuel Sender	1		USB Port	3
Fuel Pump Switch	3		Voltmeter	5
Fuel Pump - Facet	3		Washer Pump	2
Fuel Pump - SU	3		Washer Switch	2
Ground Bus Bar (LH)	3		Wiper Controller	2
Ground Bus Bar (RH)	2		Wiper Motor	2
			Wiper Switch	2


JWR Bugeye Wiring Connections

Page 1

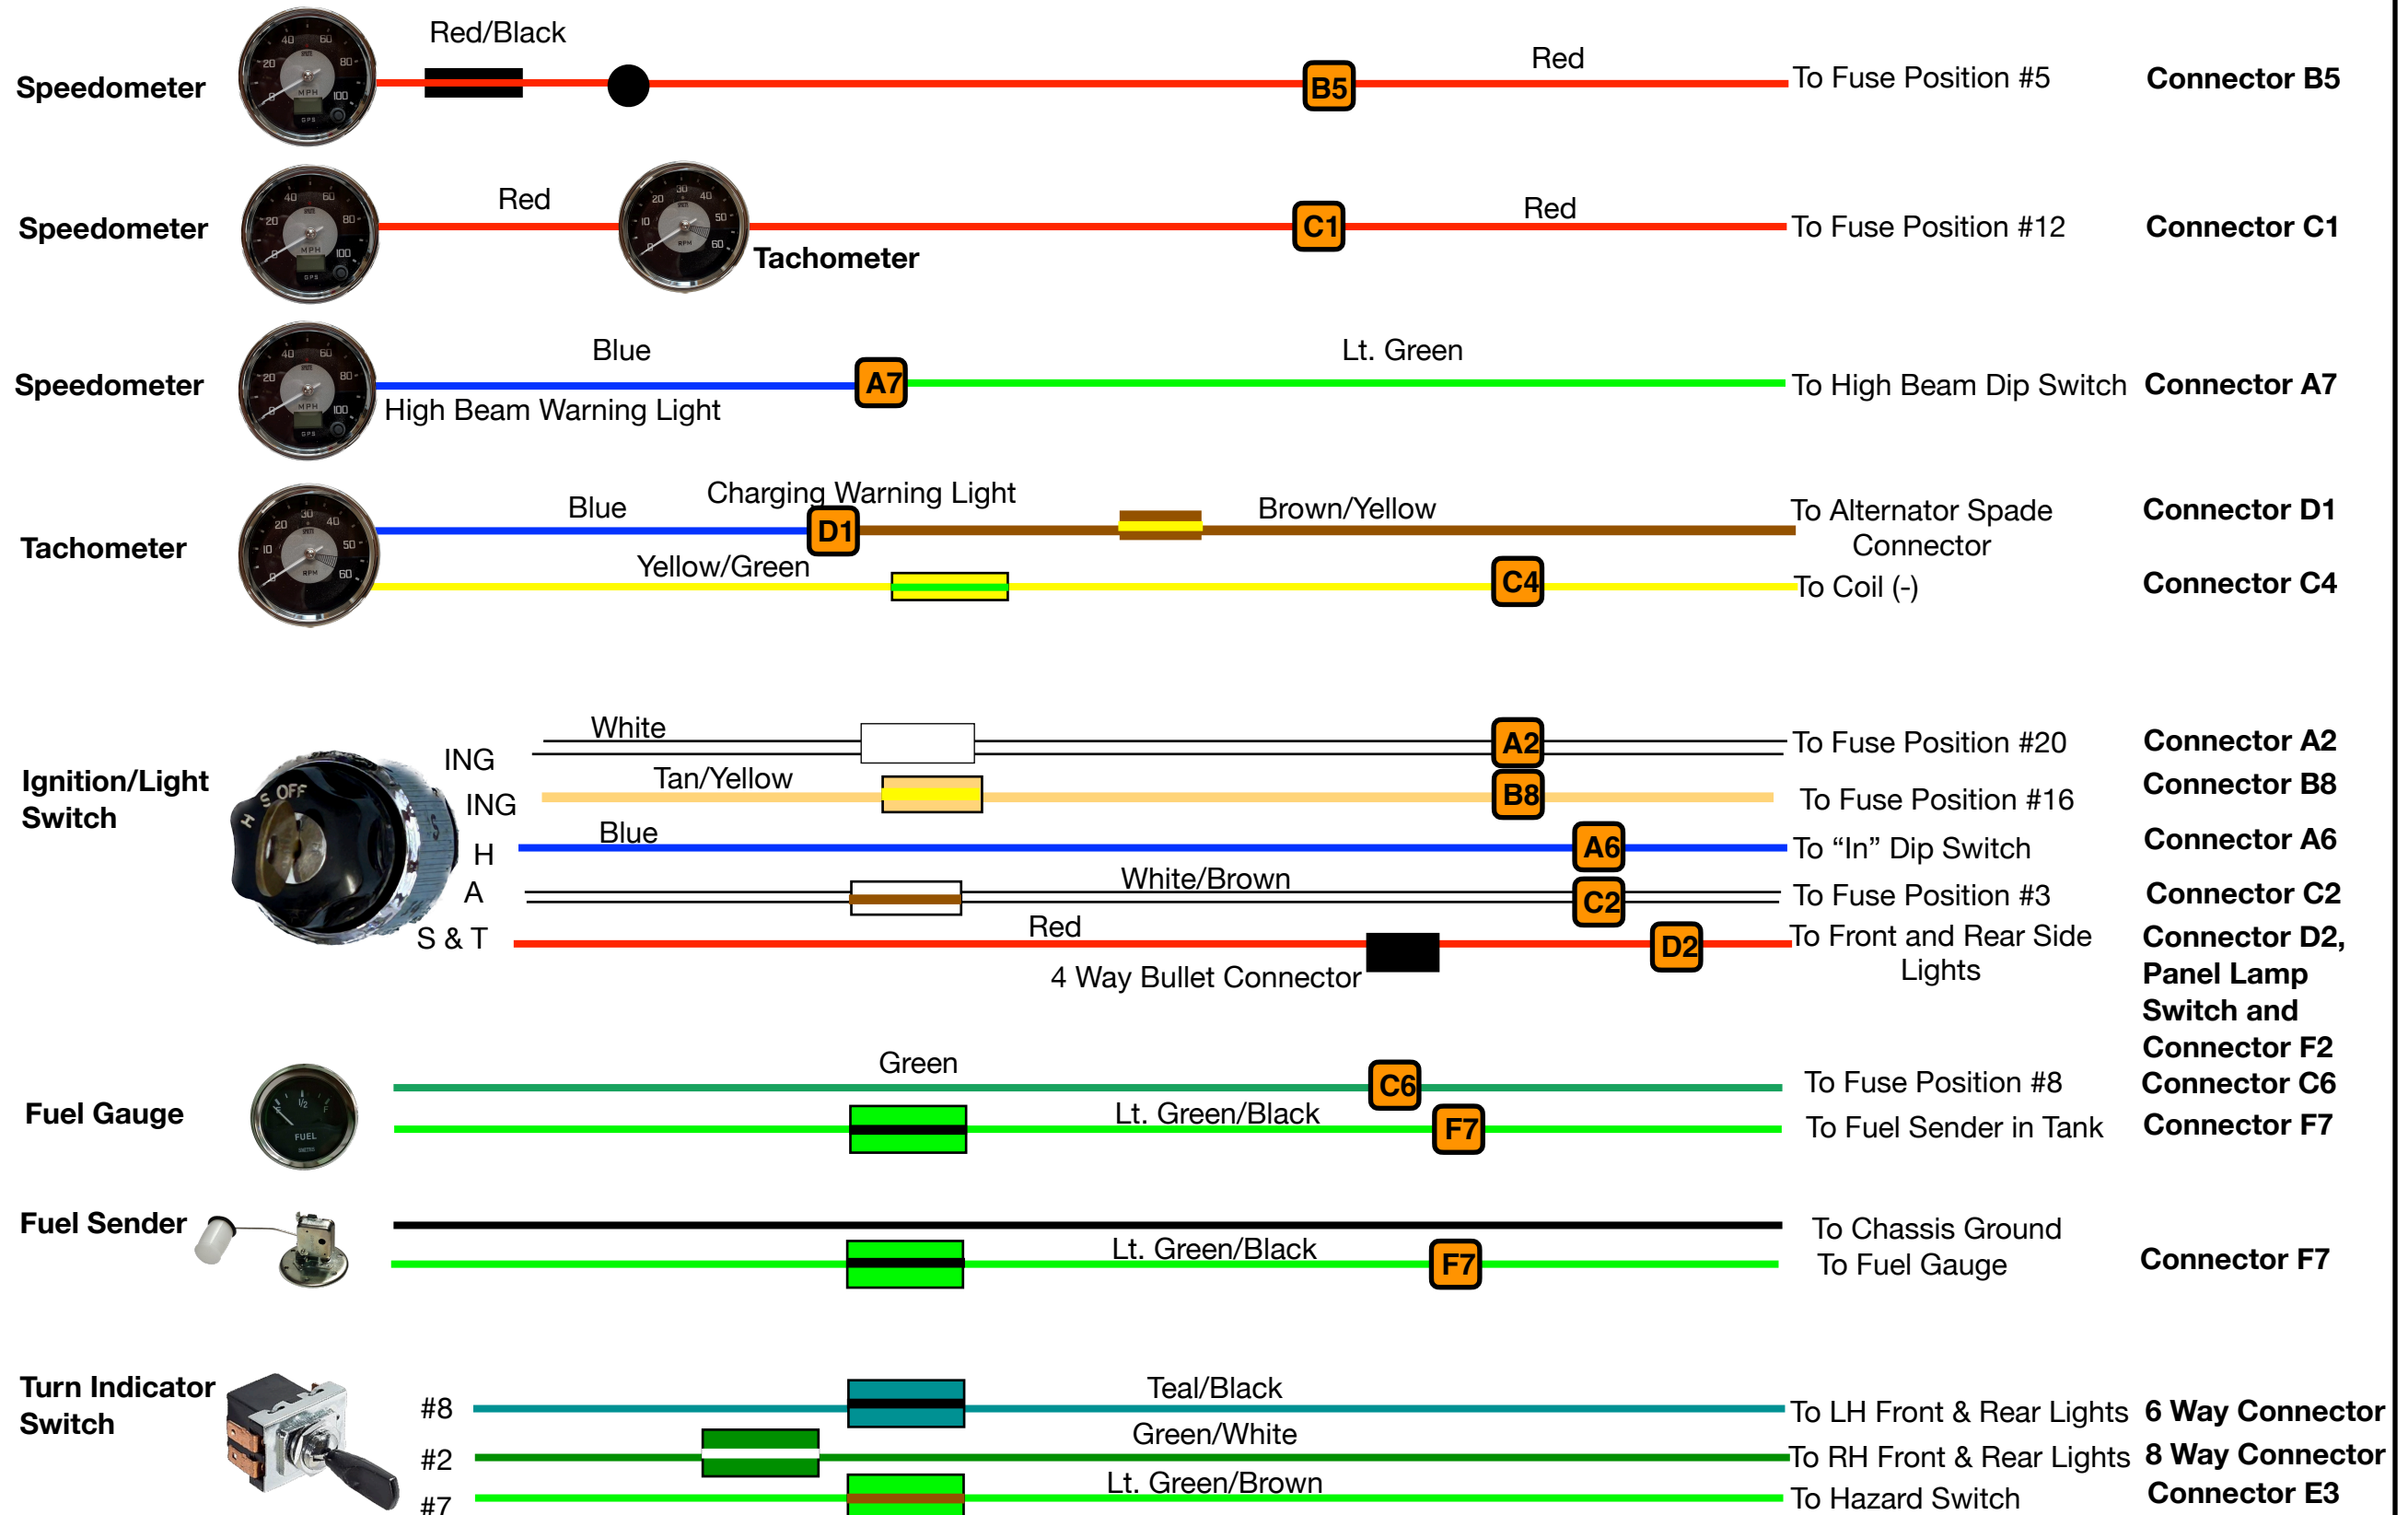

JWR Bugeye Wiring Connections

Page 2

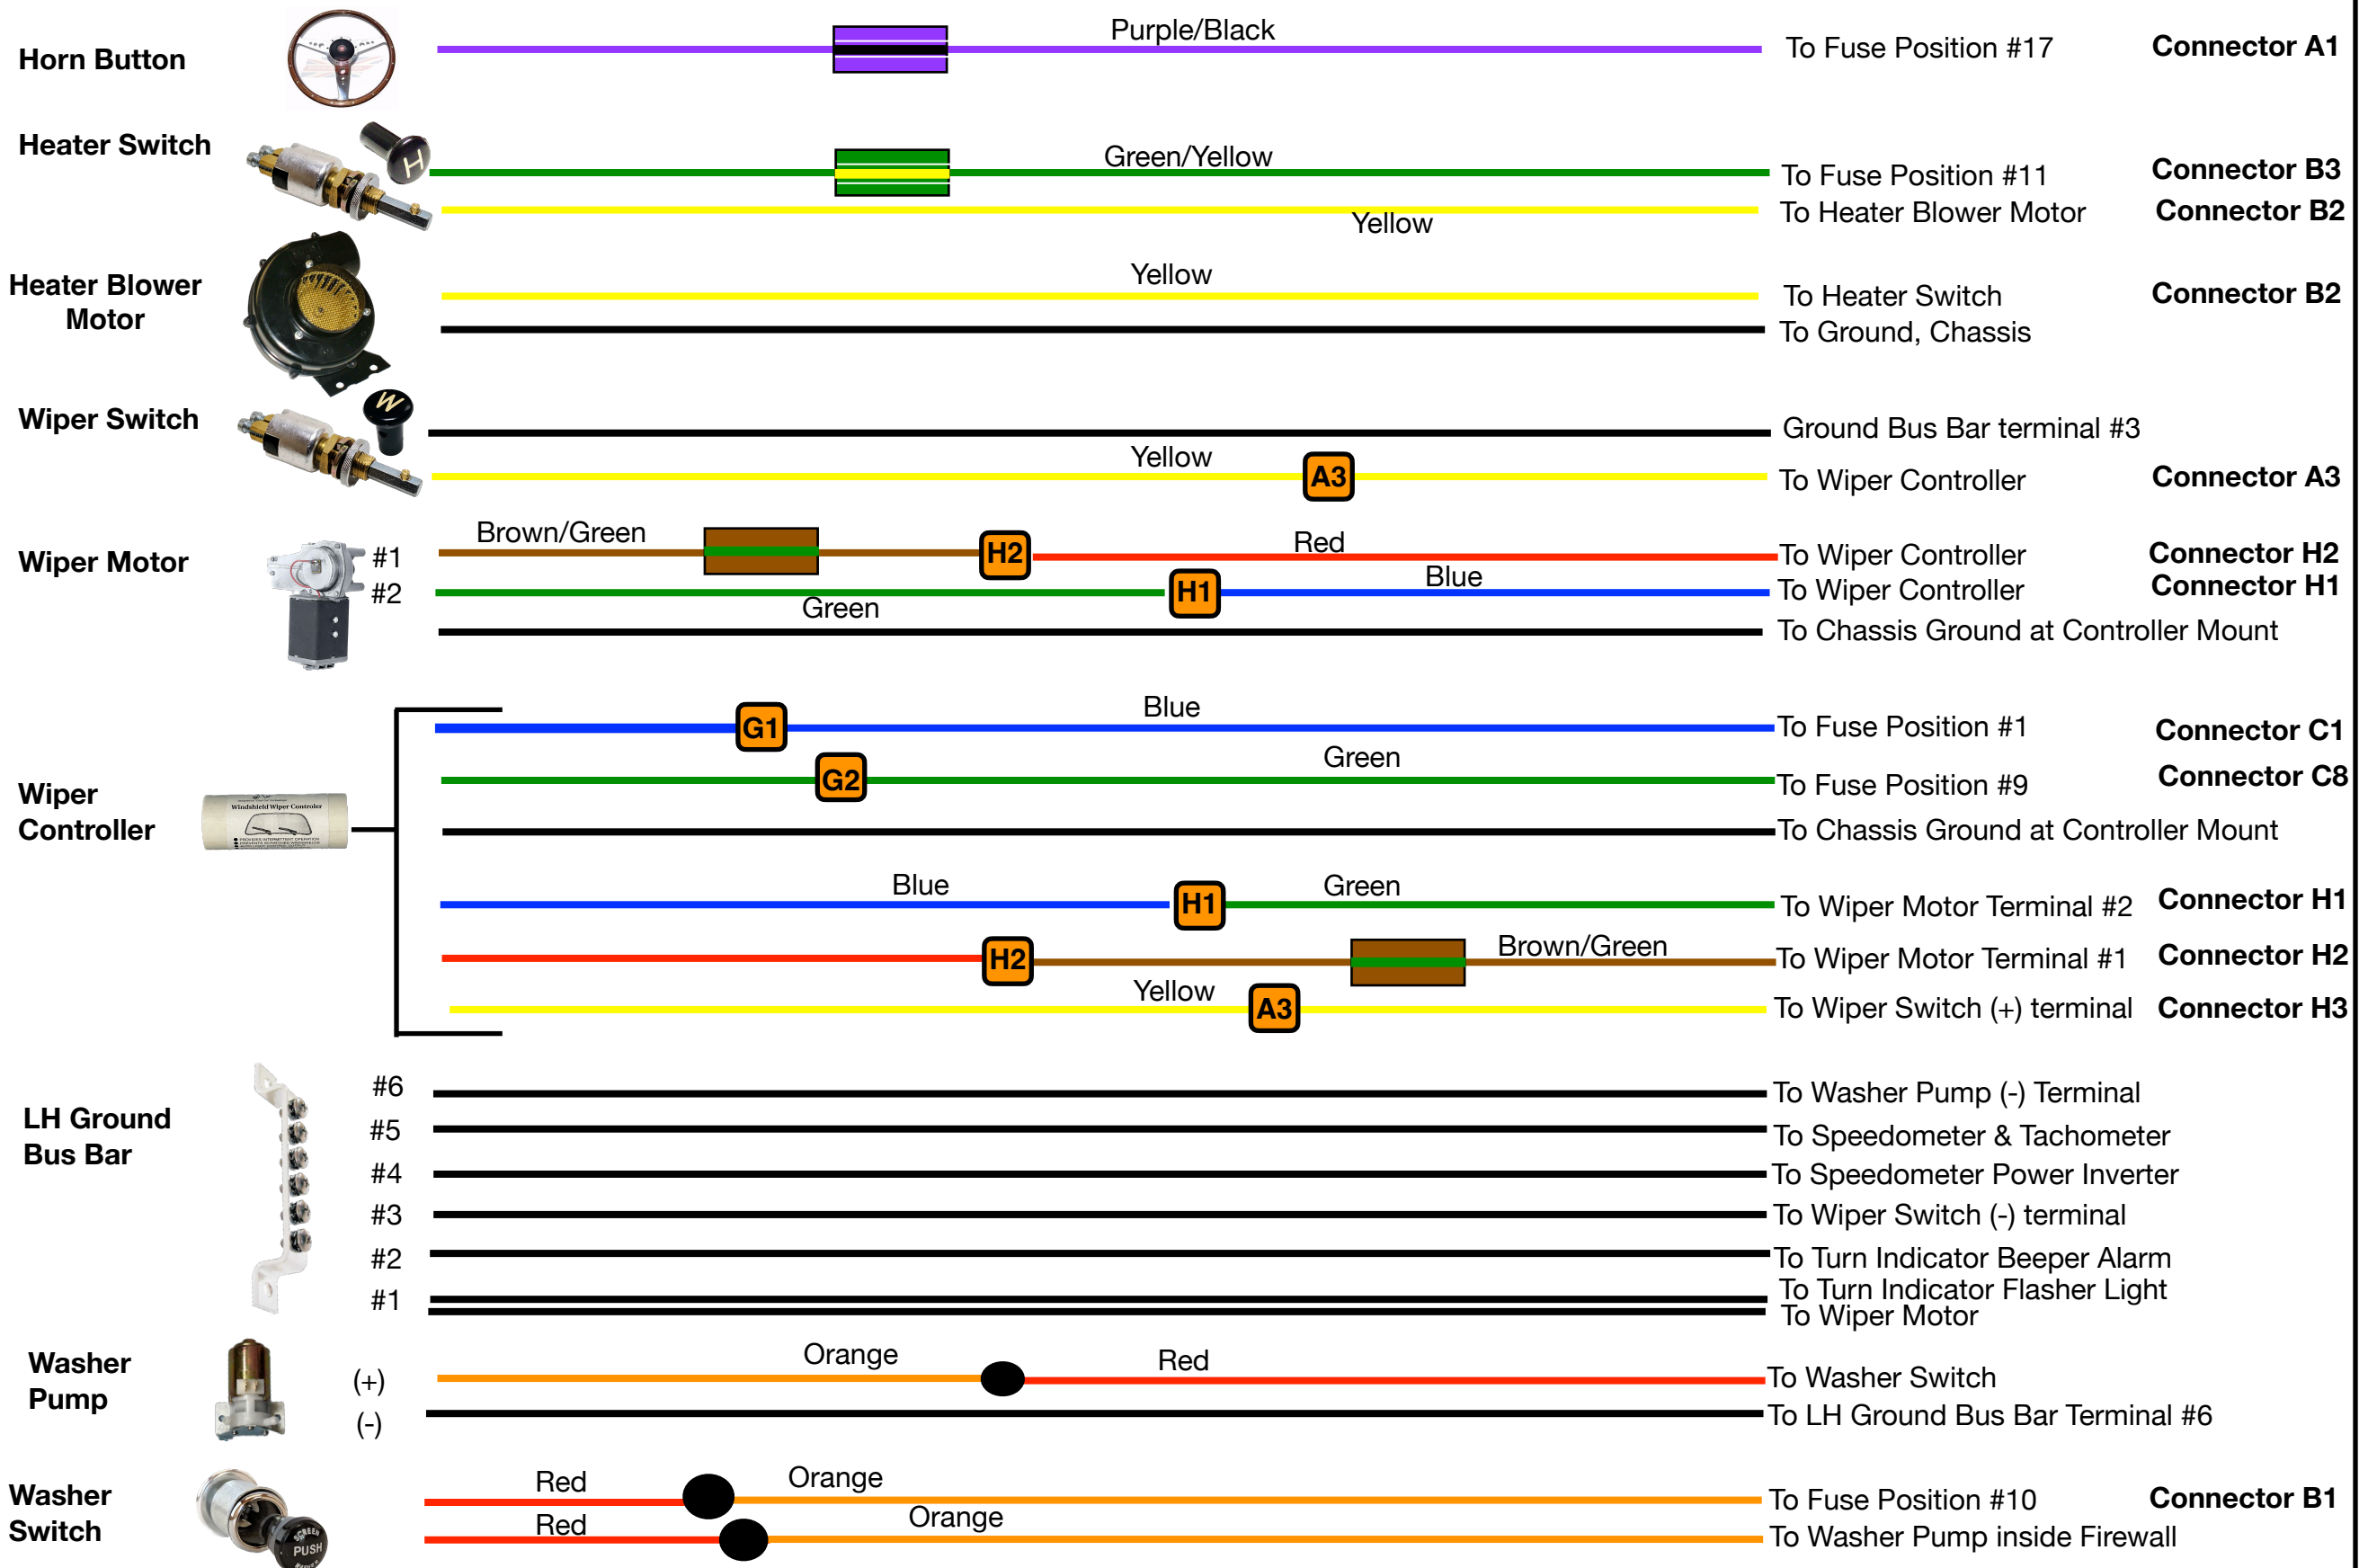

JWR Bugeye Wiring Connections

Page 3

**Driving Light
Warning Lamp**



 
**Fuel Pump
Switch**




OFF
UP
DOWN



**Courtesy Light
Relay**




#1
#2
#3
#4
#5

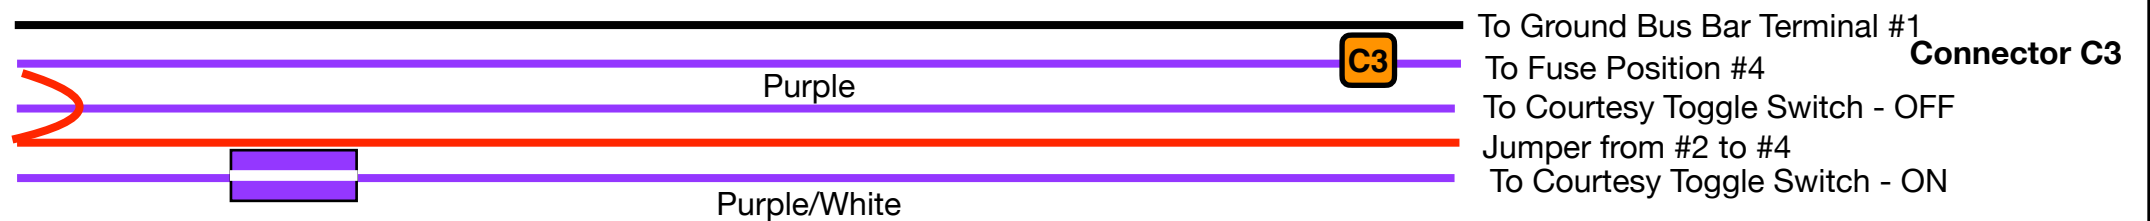


**Courtesy Light
Switch**



UP
OFF
OFF

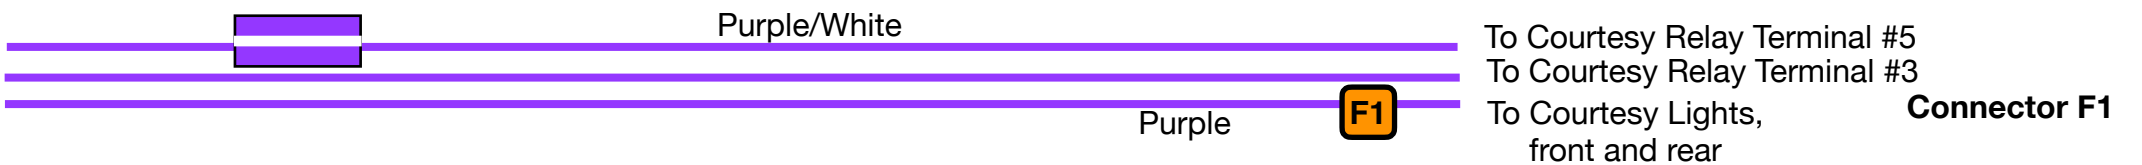

USB Port

 

**RH Ground
Bus Bar**



#6
#5
#4
#3
#2
#1



**Facet Fuel
Pump**



**SU Fuel
Pump**



JWR Bugeye Wiring Connections

Page 4

Brake Switch



Radiator Fan Switch



ON
OFF

Radiator Fan



Radiator Temp Sensor



Driving Light Relay



#87
#30
#86
#85

Driving Light Switch



OFF
ON
ON

Driving Lights



Flasher Warning Lamp




Flasher Buzzer Alarm



Panel Lamp Switch



Front & Rear Courtesy Lights

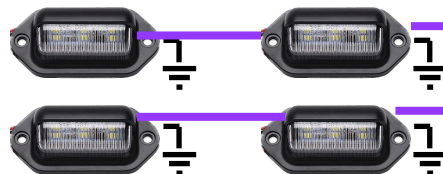

Teal Green

Brown/Green

Black/Orange

Black

Black/Green

Black

Black/Orange

Black

Blue/Tan

Blue/Yellow

Blue/Yellow

Blue/Yellow

Blue/Yellow

Blue/Tan

Blue/Tan

Black

Black

Red

Red

Red

Black

Red

White/Red

Purple

Purple

F3

A5

A5

D6

B4

B7

D6

F1

To Fuse Position #22
Through Firewall

To Fuse Position #30
To RH Ground Bus
Bar Terminal #6

To Fuse Position #29
To Ground, Chassis

To Radiator Fan Switch
To Ground, Chassis

To Driving Lights

To Fuse Position #15

To Toggle Switch "OFF"
To Ground Bus Bar Terminal #4

To Driving Lights Relay Terminal #86

To Dip Switch High Beam
Terminal

To Driving Light Warning Lamp

To Driving Lights
To Ground, Chassis

To LH Ground Bus Bar Terminal #1

To Turn Indicator
Switch and the
Hazard Switch

See JWR Bugeye
Fuse Positions 17-25
Diagram

To LH Ground Bus Bar Terminal #2

Ignition/Light
Switch

To Gauge Lights

OFF
OFF



JWR Bugeye Wiring Connections

Page 5

Alternator



To Fuse Position #21
To Charging Warning Light **Connector D1**
To Starter Switch

Starter Switch



To Battery (+)
To Starter (+)

Starter



To Starter Switch

 
Ignition Coil



To Fuse Position #6
To Distributor
To Tachometer


Connector C4

Distributor



To Ignition Coil (-)

 Voltmeter/
USB



To Fuse Position #14 **Connector B6**
To Ground Bus Bar Terminal #3

Charging
Warning
Lamp



To Alternator Spade Connector **Connector D1**

Dip
Switch



To Light Switch **Connector A6**
To Fuse Position #26
To Fuse Position #28

High Beam Terminal



To High Beam Warning Lamp **Connector A7**
To Driving Light Toggle Switch "ON"

Head
Lights



To Fuse Position #25
To Fuse Position #27

Head
Lights



To Fuse Position #27
To Fuse Position #25

JWR Bugeye Wiring Connections

Page 6

