

JWR Bugeye Electrical Components Index

<u>ITEM</u>	<u>PAGE NUMBER</u>	<u>ITEM</u>	<u>PAGE NUMBER</u>
Alternator	5	Hazard Switch	See Connector E
Brake Light LH Rear	6	Headlights	5
Brake Light RH Rear	6	Heater Blower Motor	2
Brake Switch	4	Heater Switch	2
Charging Warning Lamp	5	High Beam Warning Light	6
Courtesy Lights	4	Horns	6
Courtesy Light Relay	3	Horn Button	2
Courtesy Light Switch	3	Ignition Coil	5
Dip Switch	5	Ignition/Light Switch	1
Distributor	5	License Plate Lamp	6
Driving Lights	4	Panel Lamp Switch	4
Driving Light Relay	4	Radiator Fan	4
Driving Light Switch	4	Radiator Fan Switch	4
Driving Light Warning Lamp	3	Radiator Temp Sensor	4
Flasher Buzzer Alarm	4	Sidelights (Front)	6
Flasher Light LH Front	6	Speedometer	1
Flasher Light RH Front	6	Starter	5
Flasher Light LH Rear	6	Starter Switch	5
Flasher Light RH Rear	6	Tachometer	1
Flasher Warning Lamp	4	Tail Lights	6
Fuel Gauge	1	Turn Indicator Switch	1
Fuel Sender	1	USB Port	3
Fuel Pump Switch	3	Voltmeter	5
Fuel Pump - Facet	3	Washer Pump	2
Fuel Pump - SU	3	Washer Switch	2
Ground Bus Bar (LH)	3	Wiper Controller	2
Ground Bus Bar (RH)	2	Wiper Motor	2
		Wiper Switch	2