



JWR Bugeye Power Distribution to Fuse Box

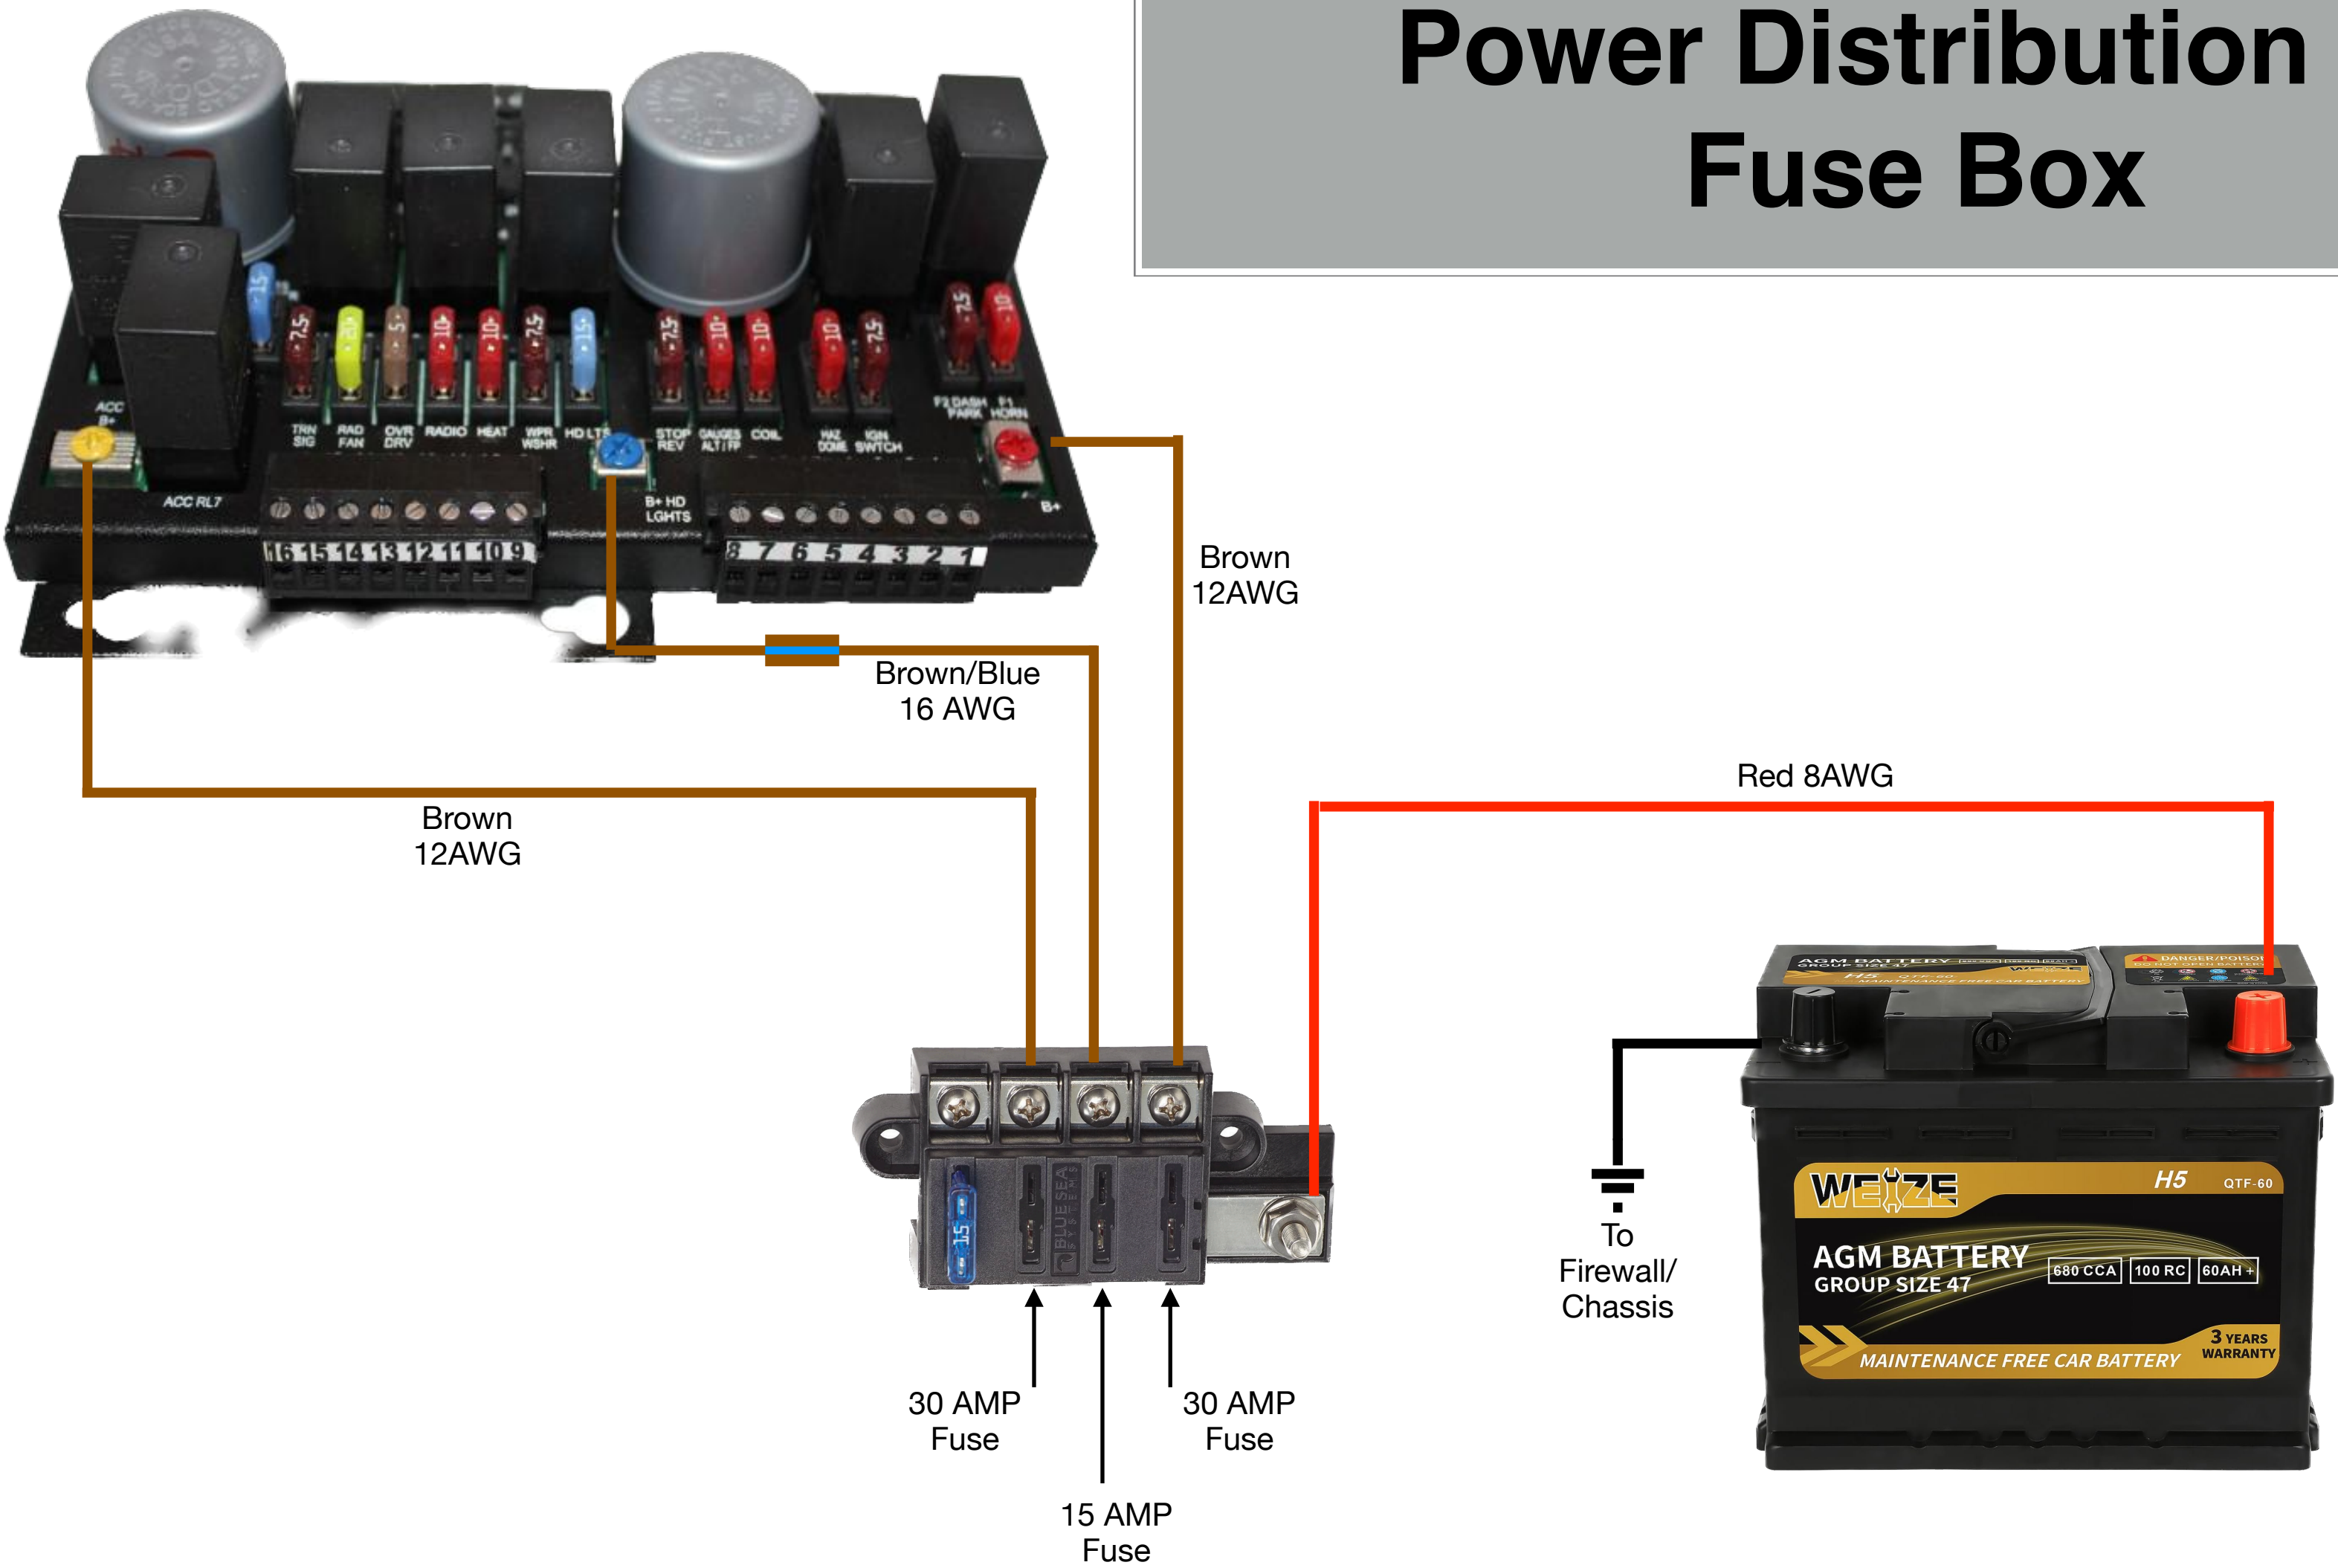


JWR Bugeye Fuse Positions 1-8

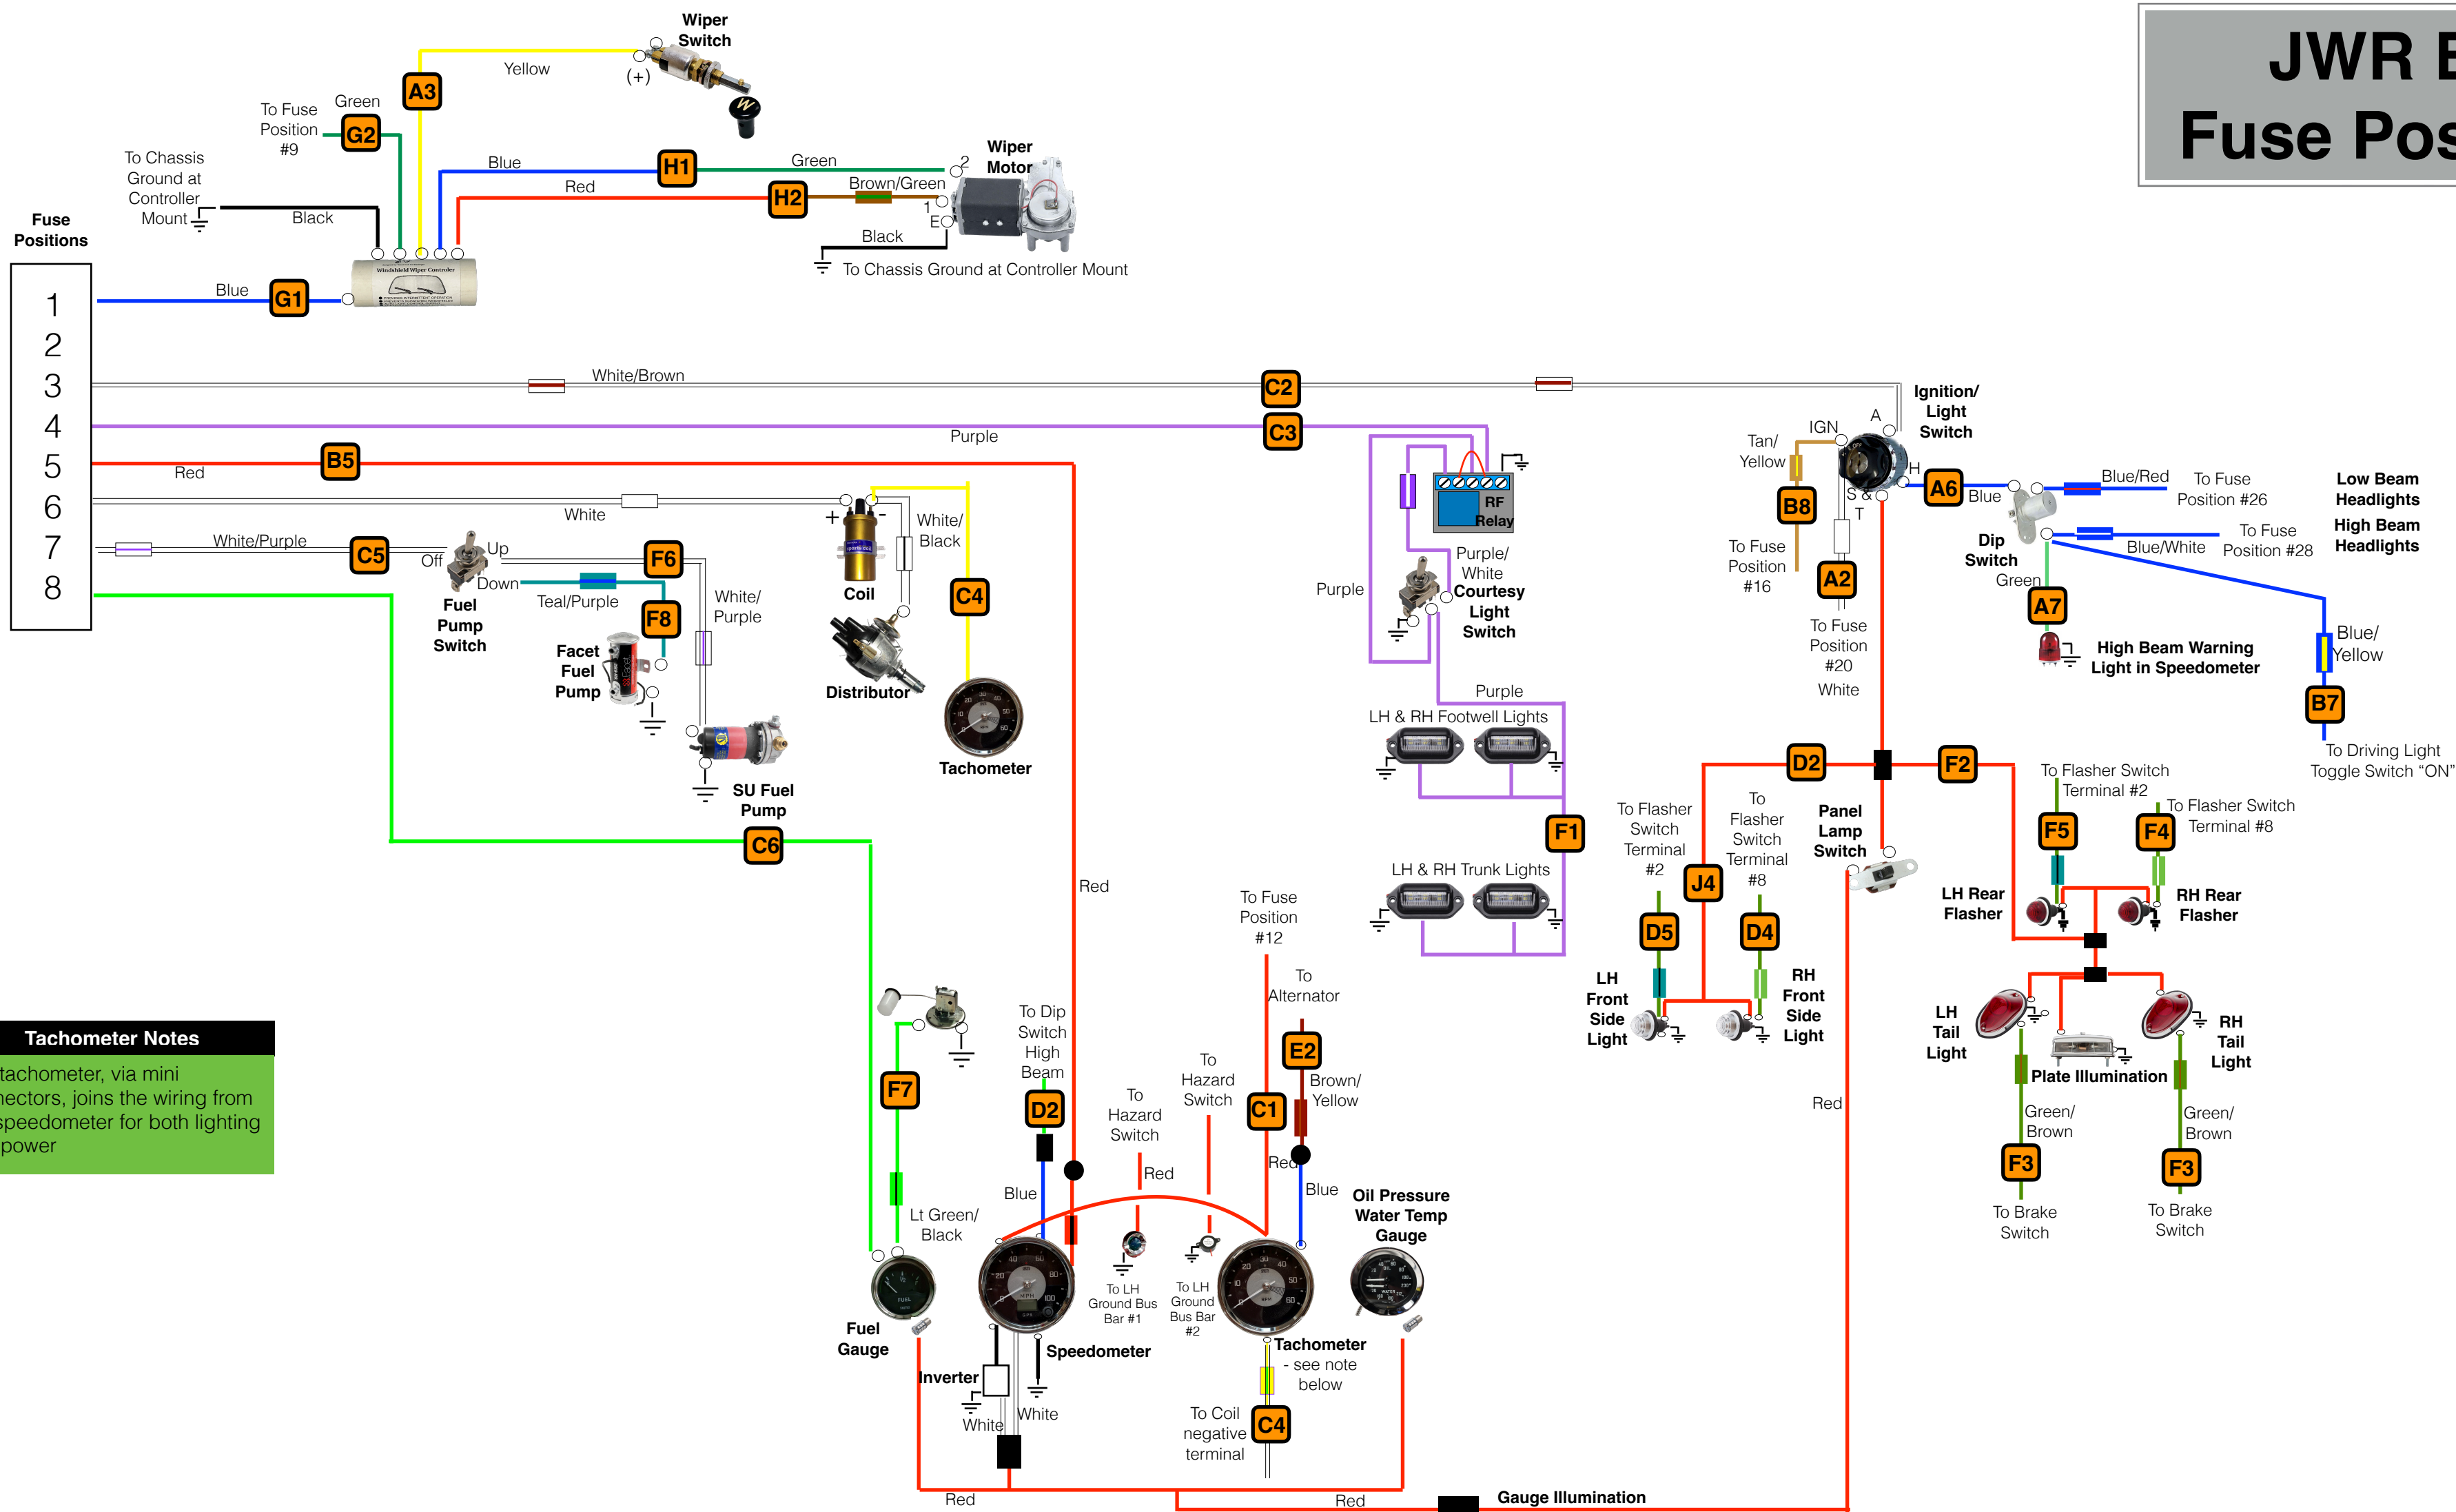

Tachometer Notes

The tachometer, via mini connectors, joins the wiring from the speedometer for both lighting and power


JWR Bugeye Fuse Positions 9-16

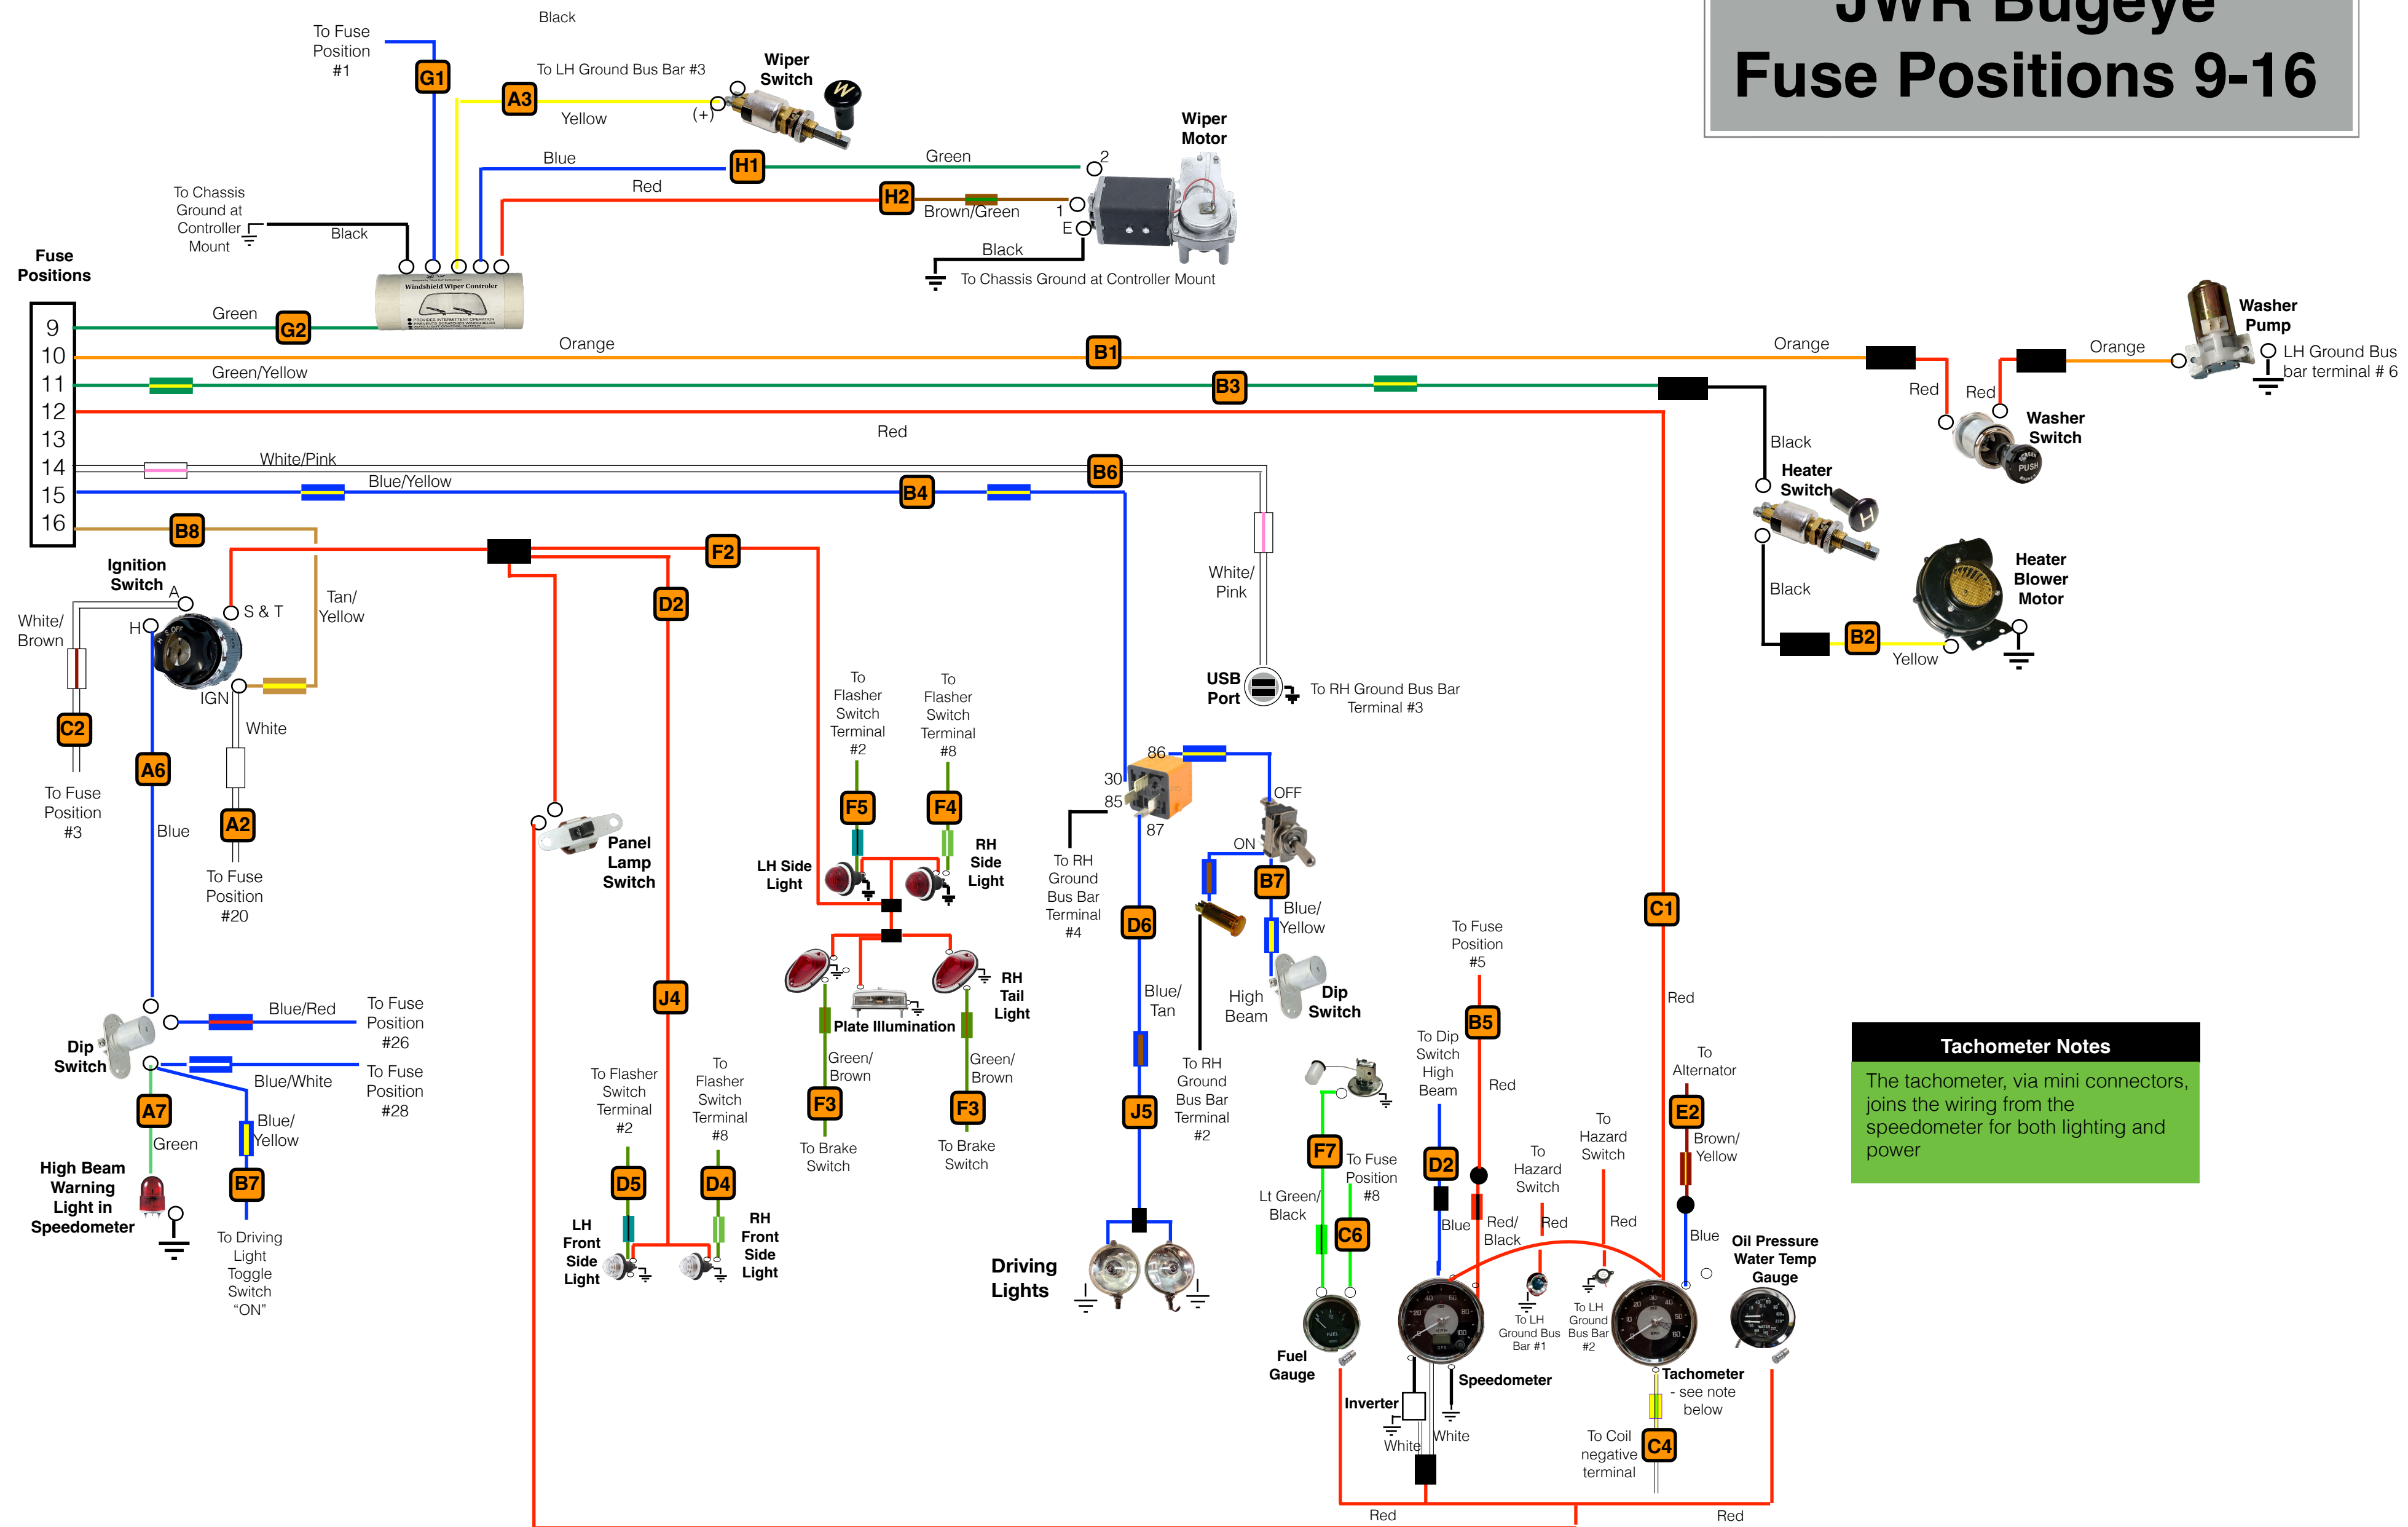

Tachometer Notes

The tachometer, via mini connectors, joins the wiring from the speedometer for both lighting and power

JWR Bugeye Fuse Positions 17-25

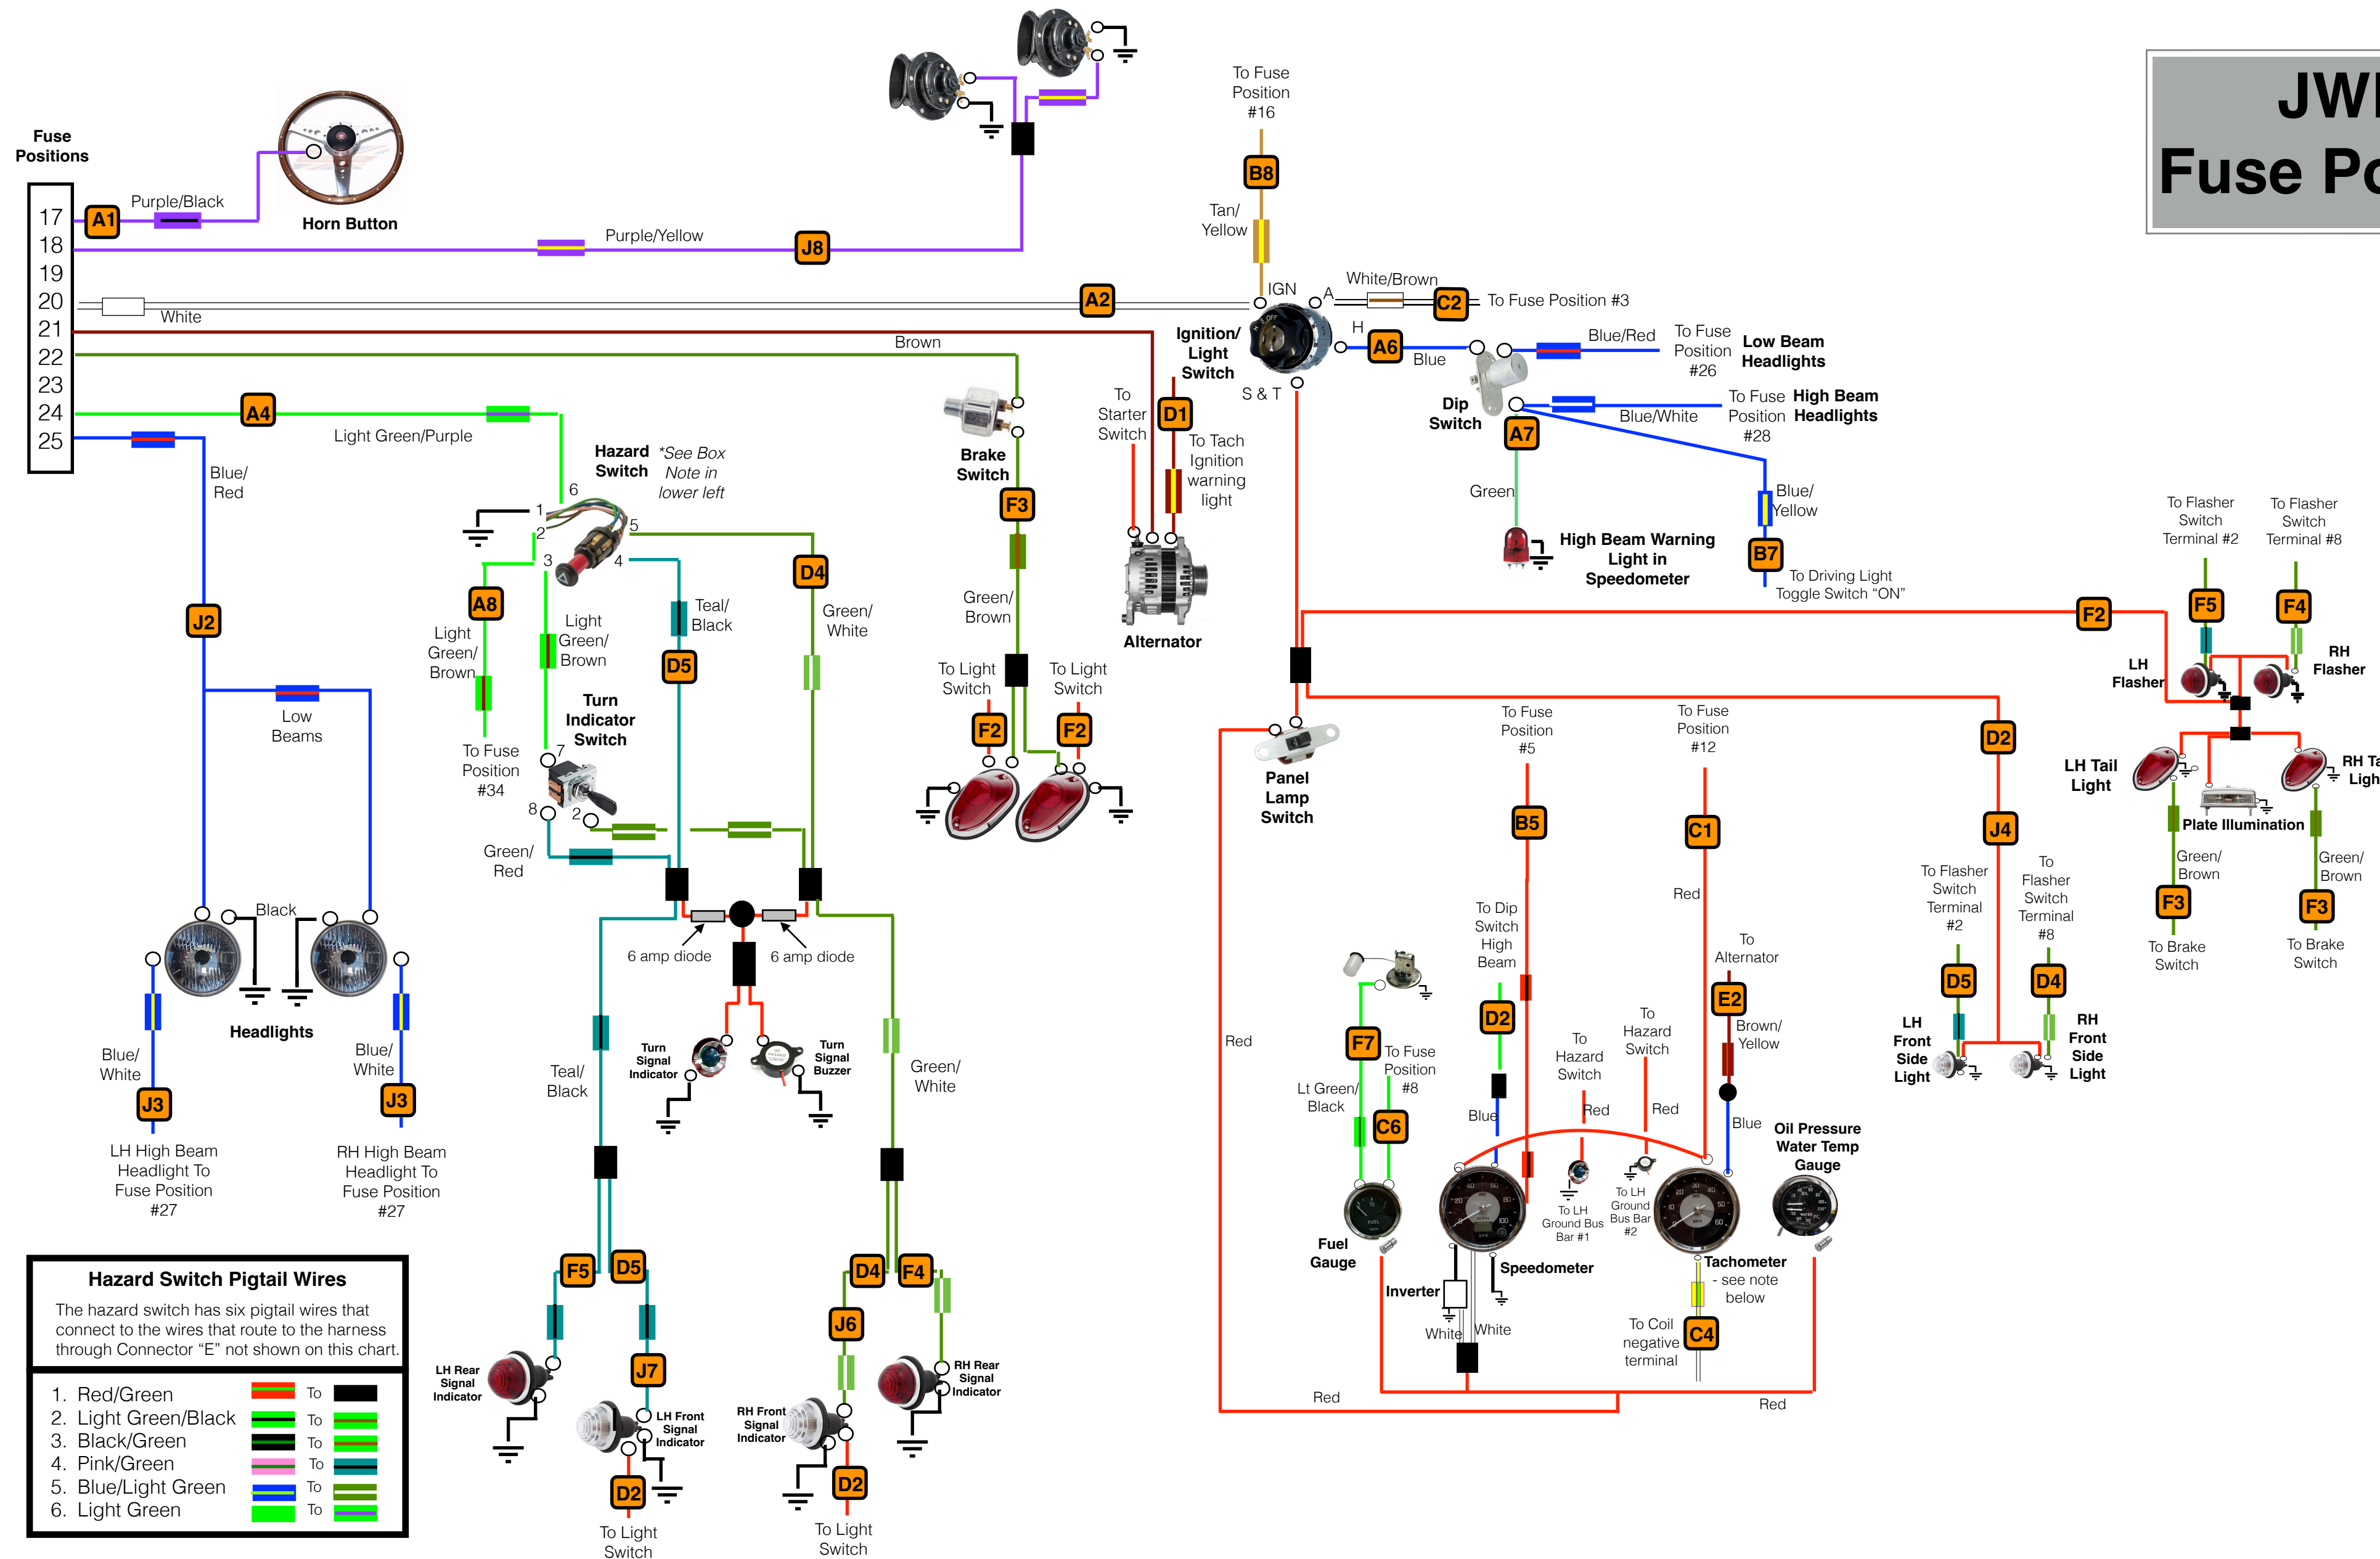

Tachometer Notes

The tachometer, via mini connectors, joins the wiring from the speedometer for both lighting and power

JWR Bugeye Fuse Positions 26-34

